





WINDGUARD INSTALLATION

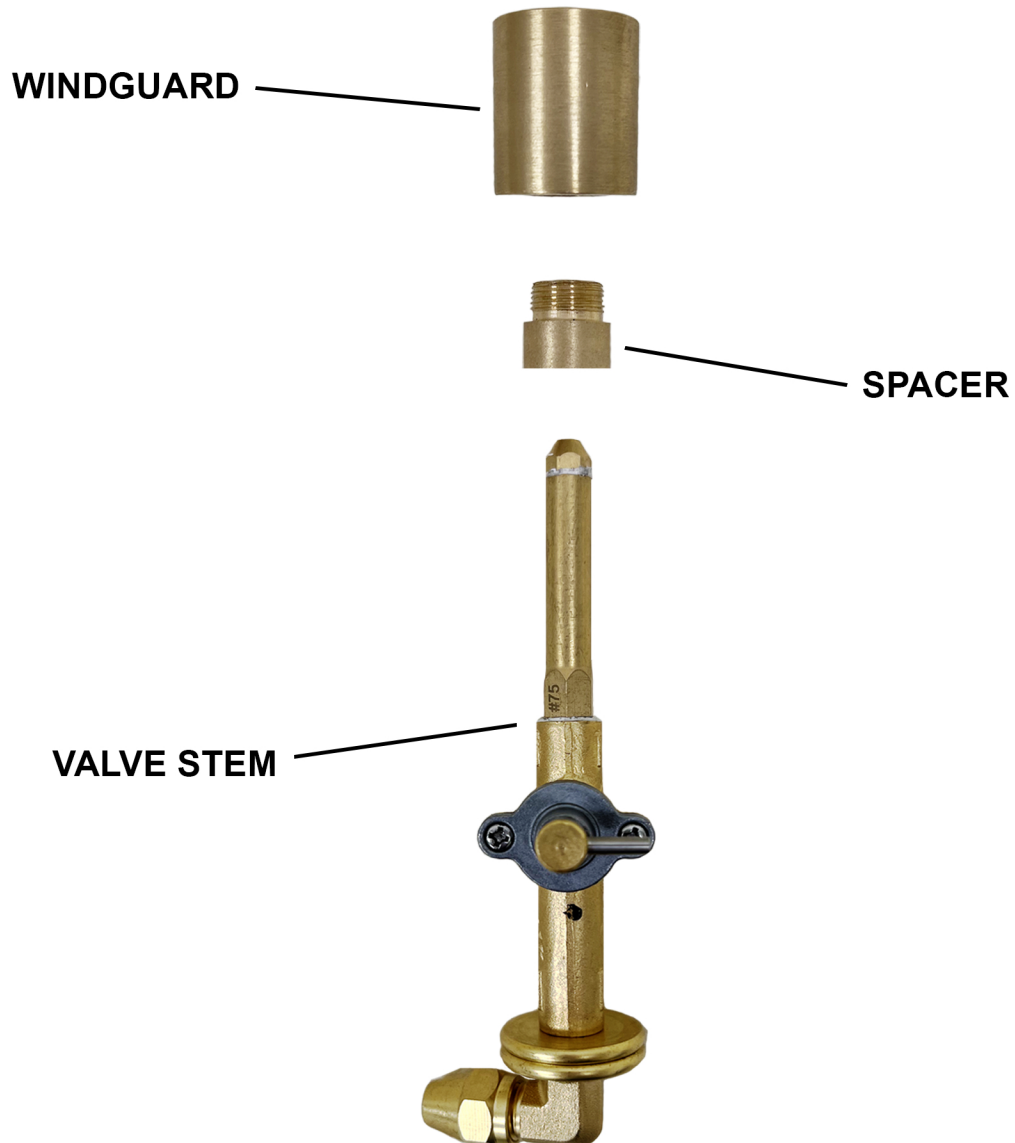

1. Make sure Spacer is screwed into Windguard.

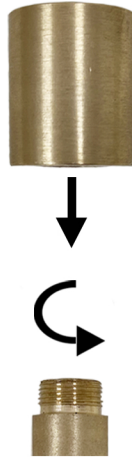

2. Slip Windguard/Spacer over Valve Stem.



Windguard should sit comfortably on Stem.

**Only the tip of the Stem should be exposed
within the Windguard's covering.**

Our Windguards are only compatible with our
Manual Gas Valves. Our Windguard is not
compatible with our Electronic Ignition accessory.



**Our discontinued stems (above) are no longer
compatible with our Windguard accessory.**

**If your stem looks like the one pictured above,
please contact us at 225-296-6610.**